



### More Hints

- Make sure that the flat side of the push-buttons is facing the top of the board.
- The bottom of the little speaker has + (plus) and - (minus) pins. Put the + pin in the hole closest to R17.
- The display can be inserted in either orientation. There's no "top" or "bottom" of the display.
- Insert the screws for the battery holder from the bottom of the board. This makes the battery fit better.
- Insert the battery clip through the hole in the bottom of the board, and tie a loose knot to keep it from falling out.